


# 3

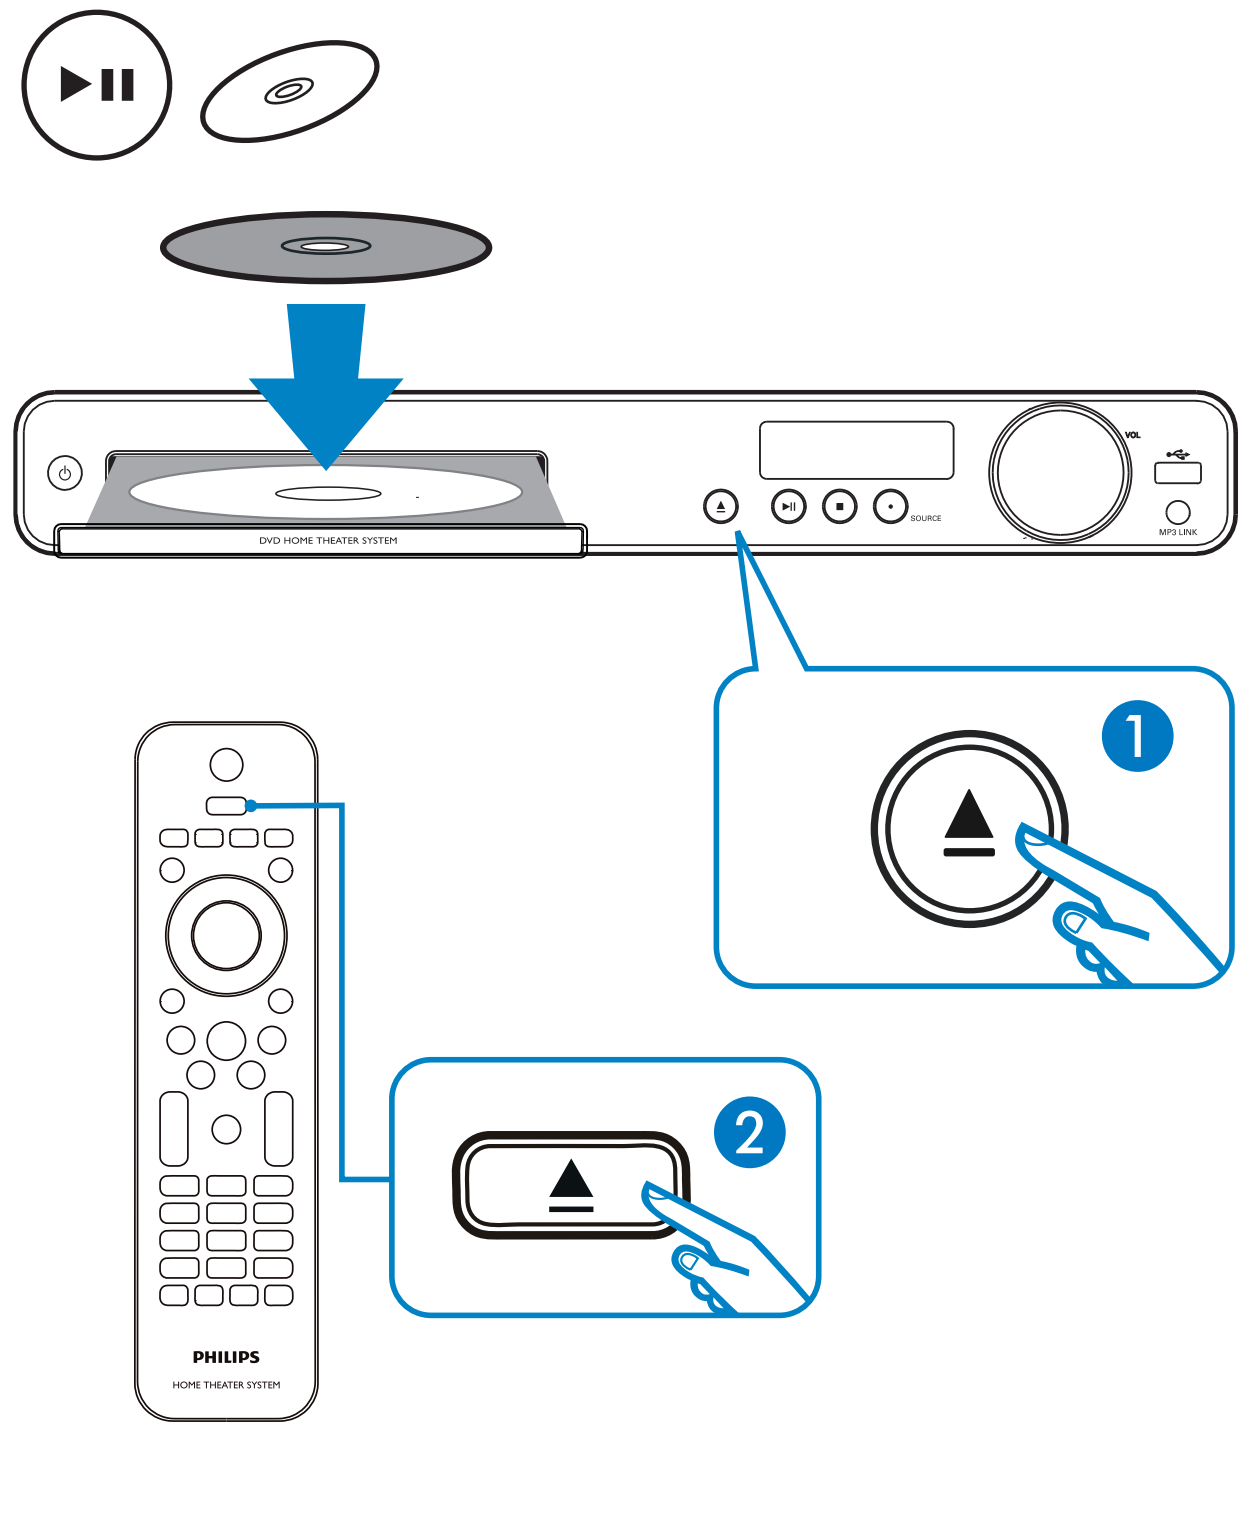

## MP3

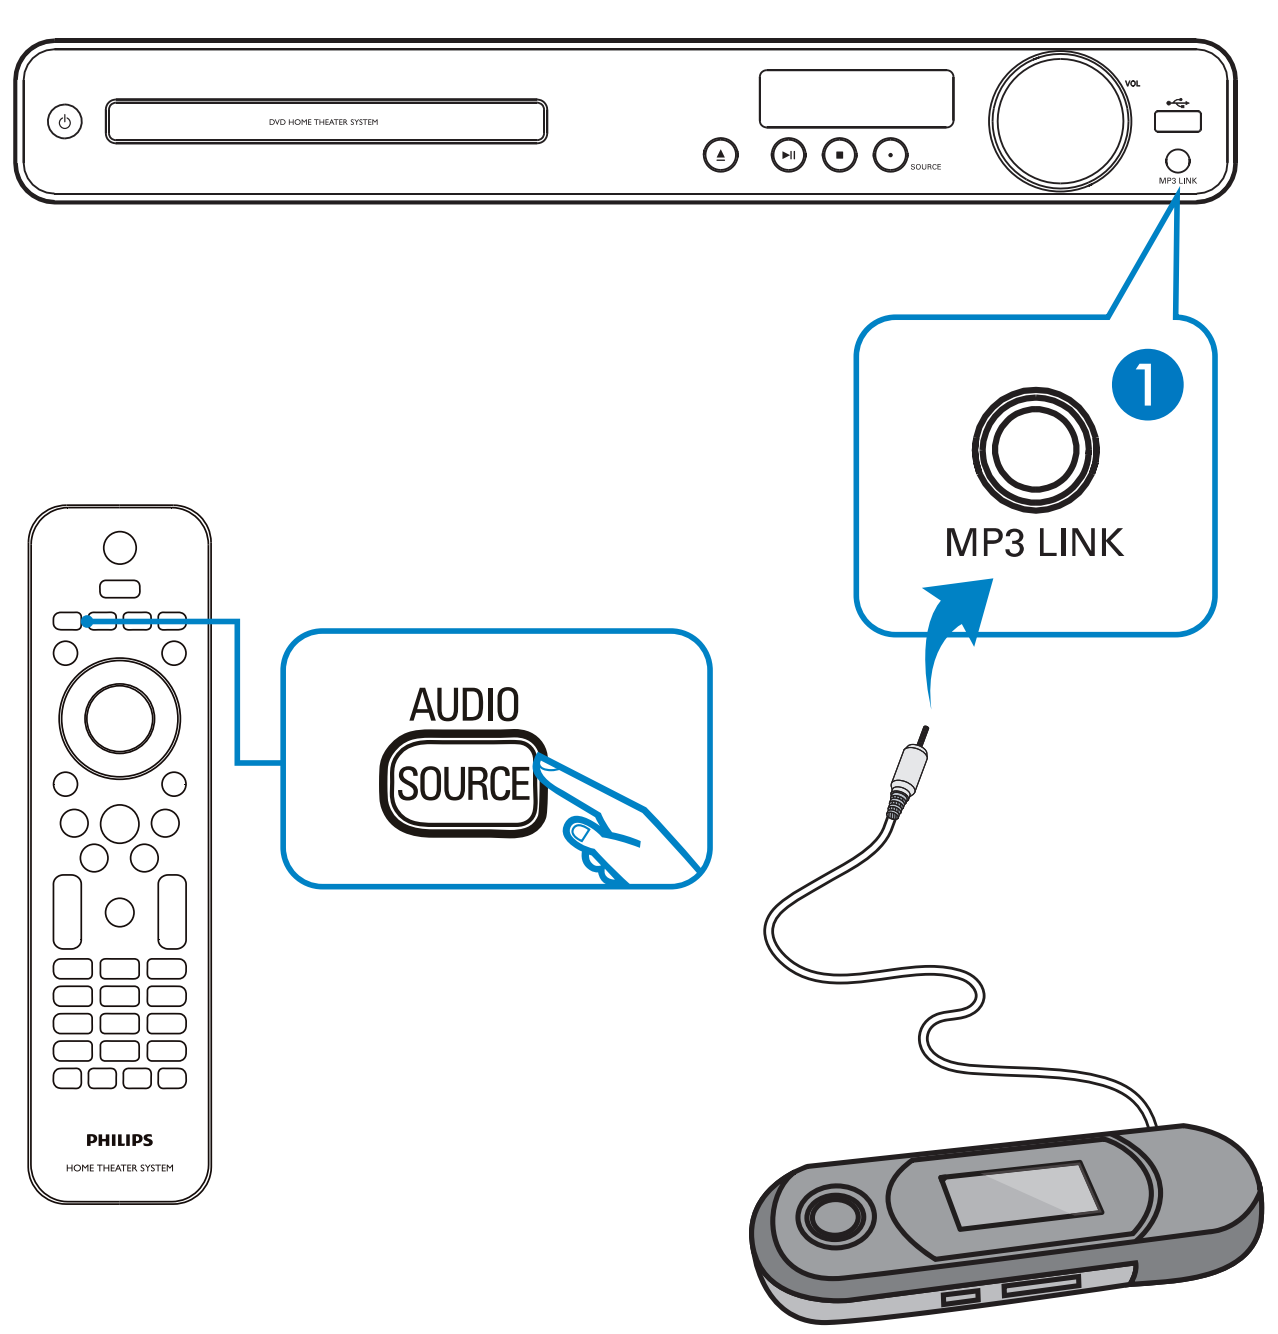


## USB

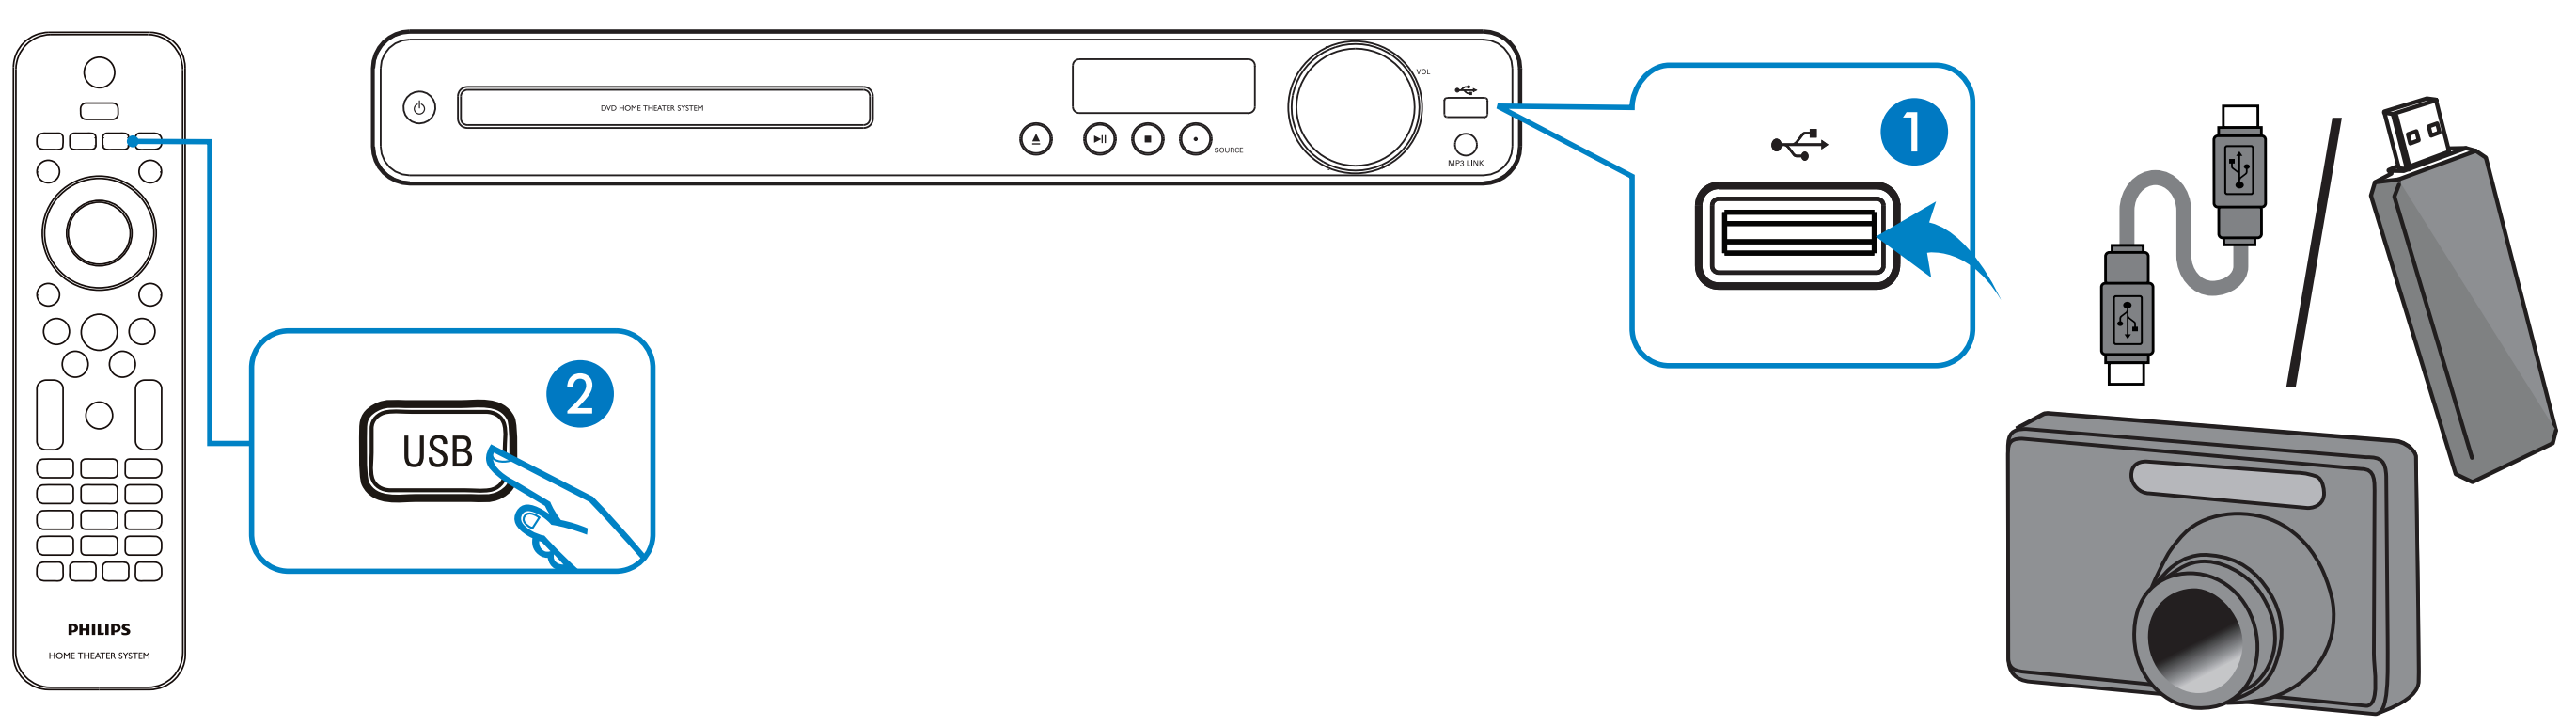



Register your product and get support at

www.philips.com/welcome

HTS3269



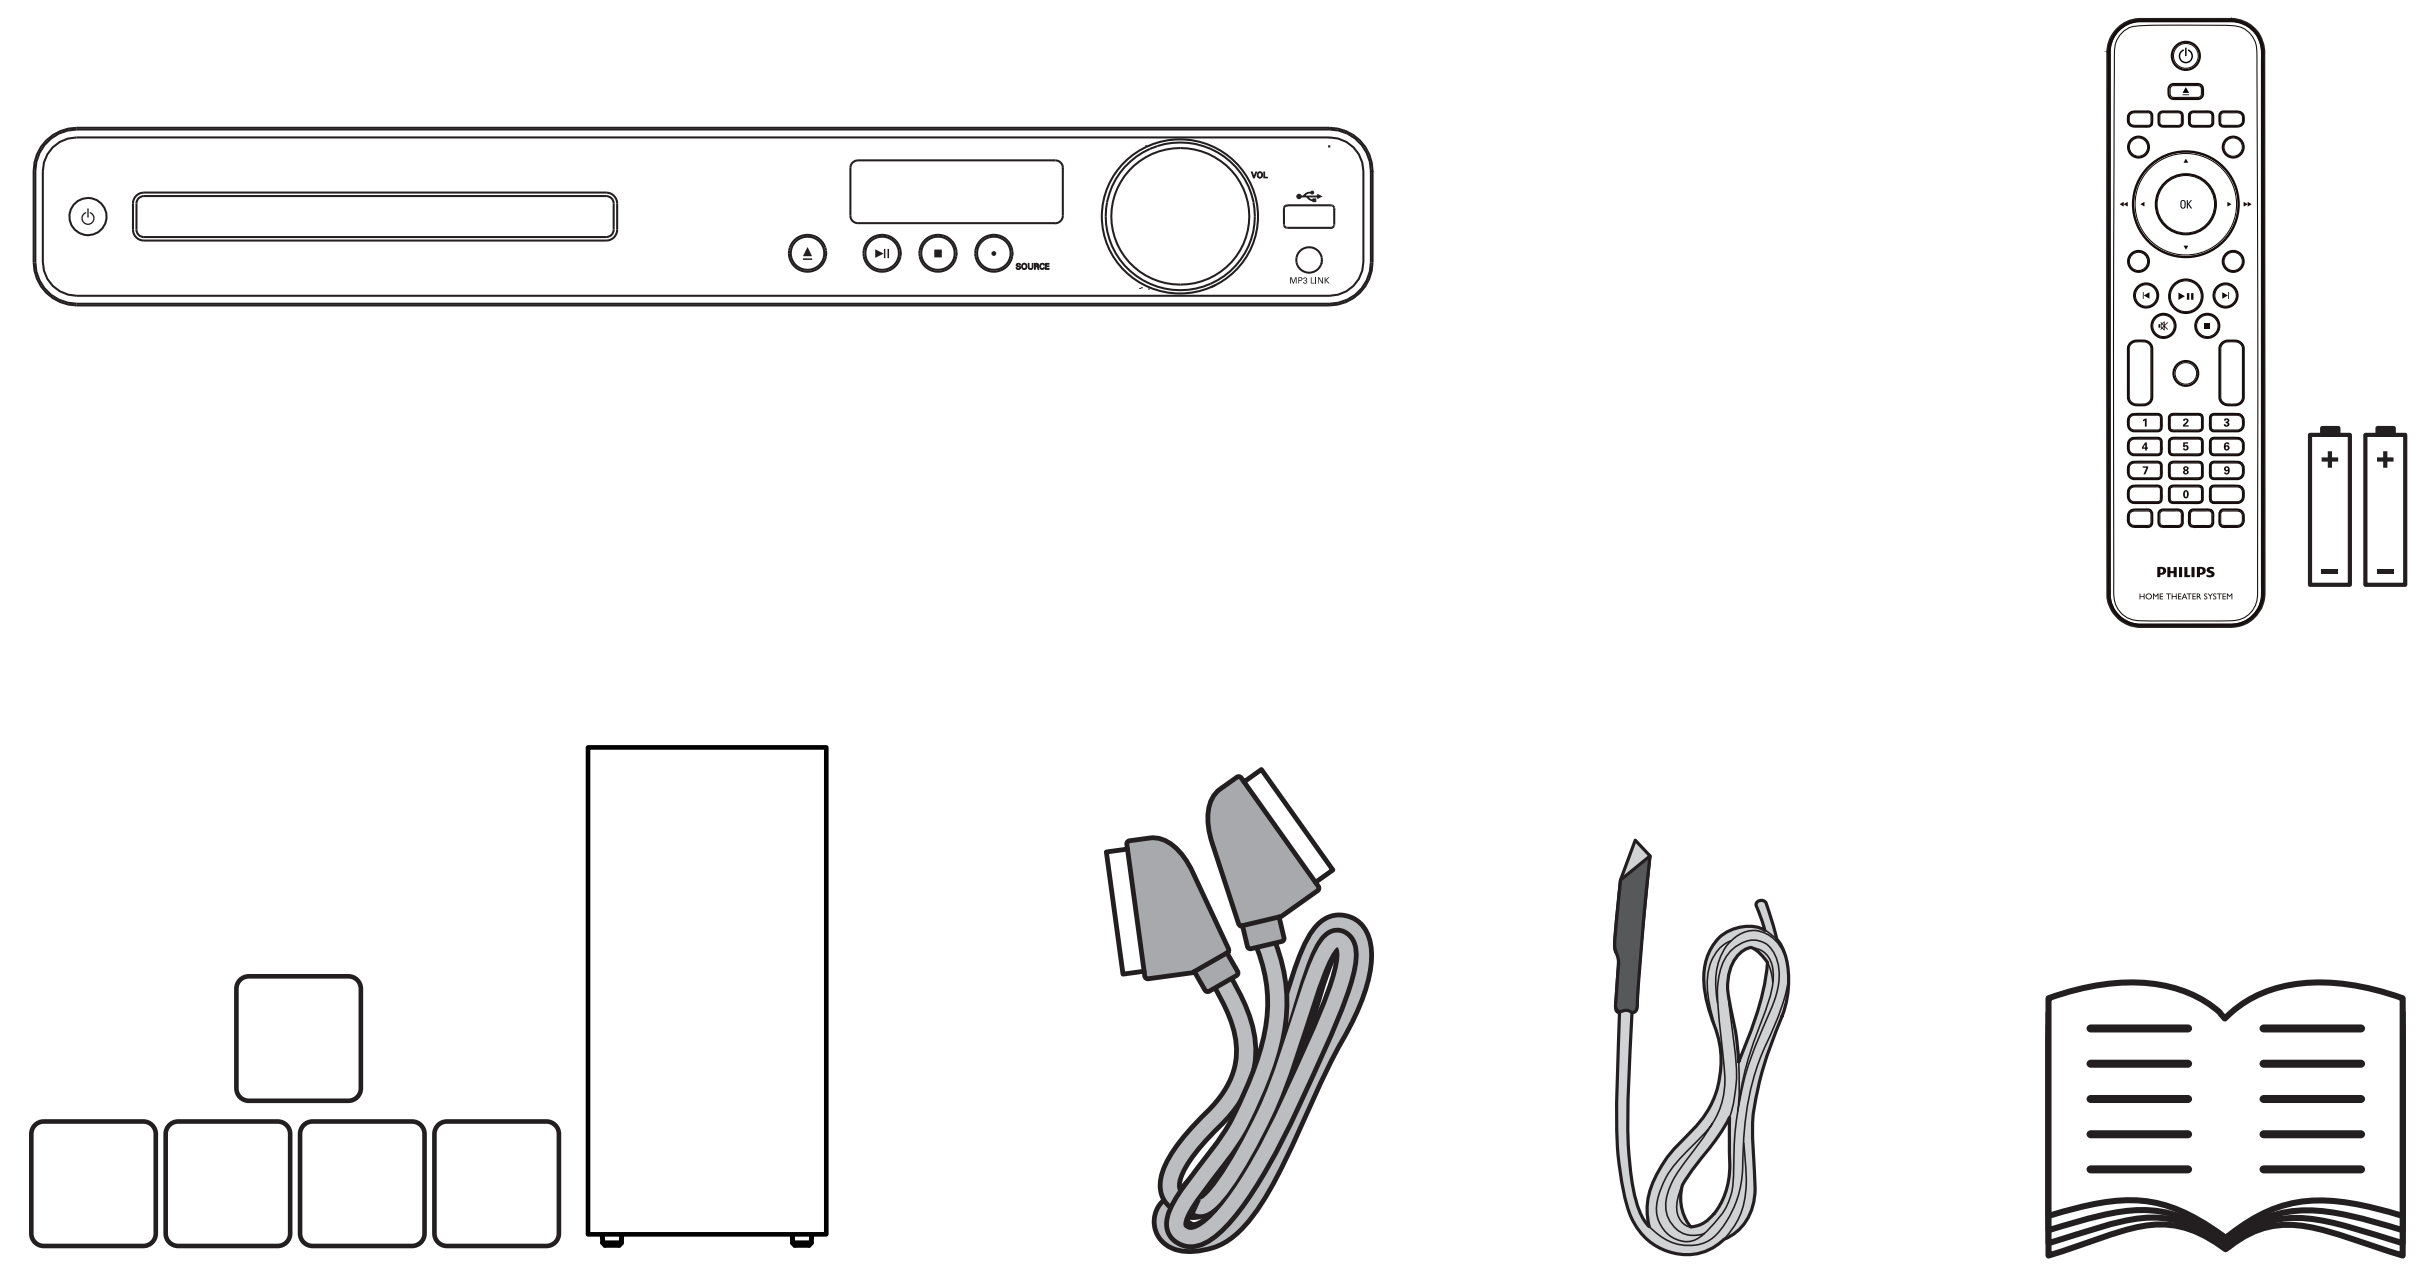





Be responsible
Respect copyrights


PHILIPS


# 1

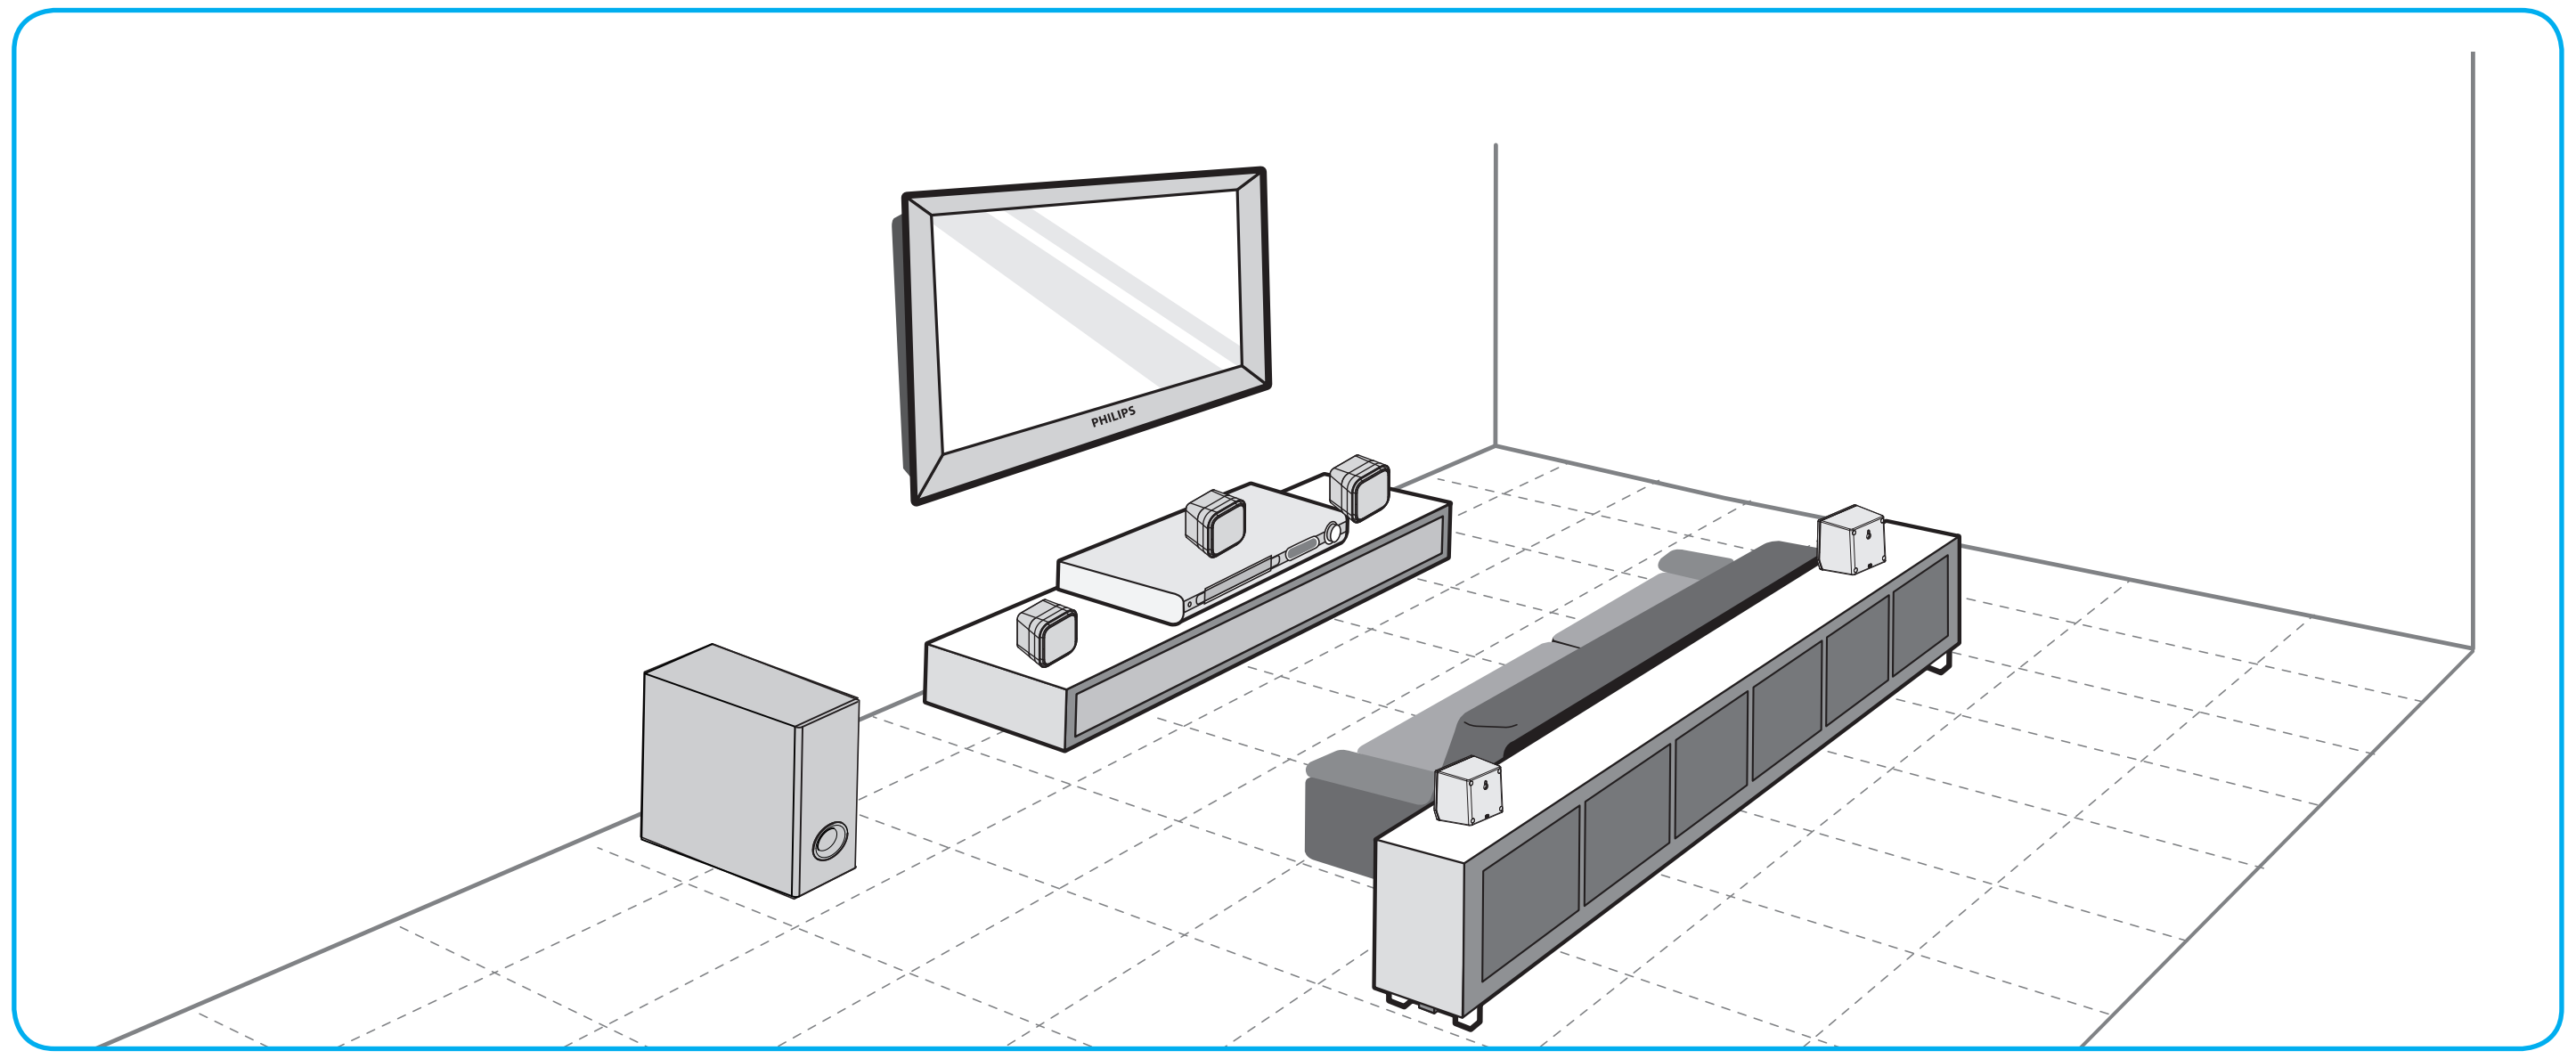


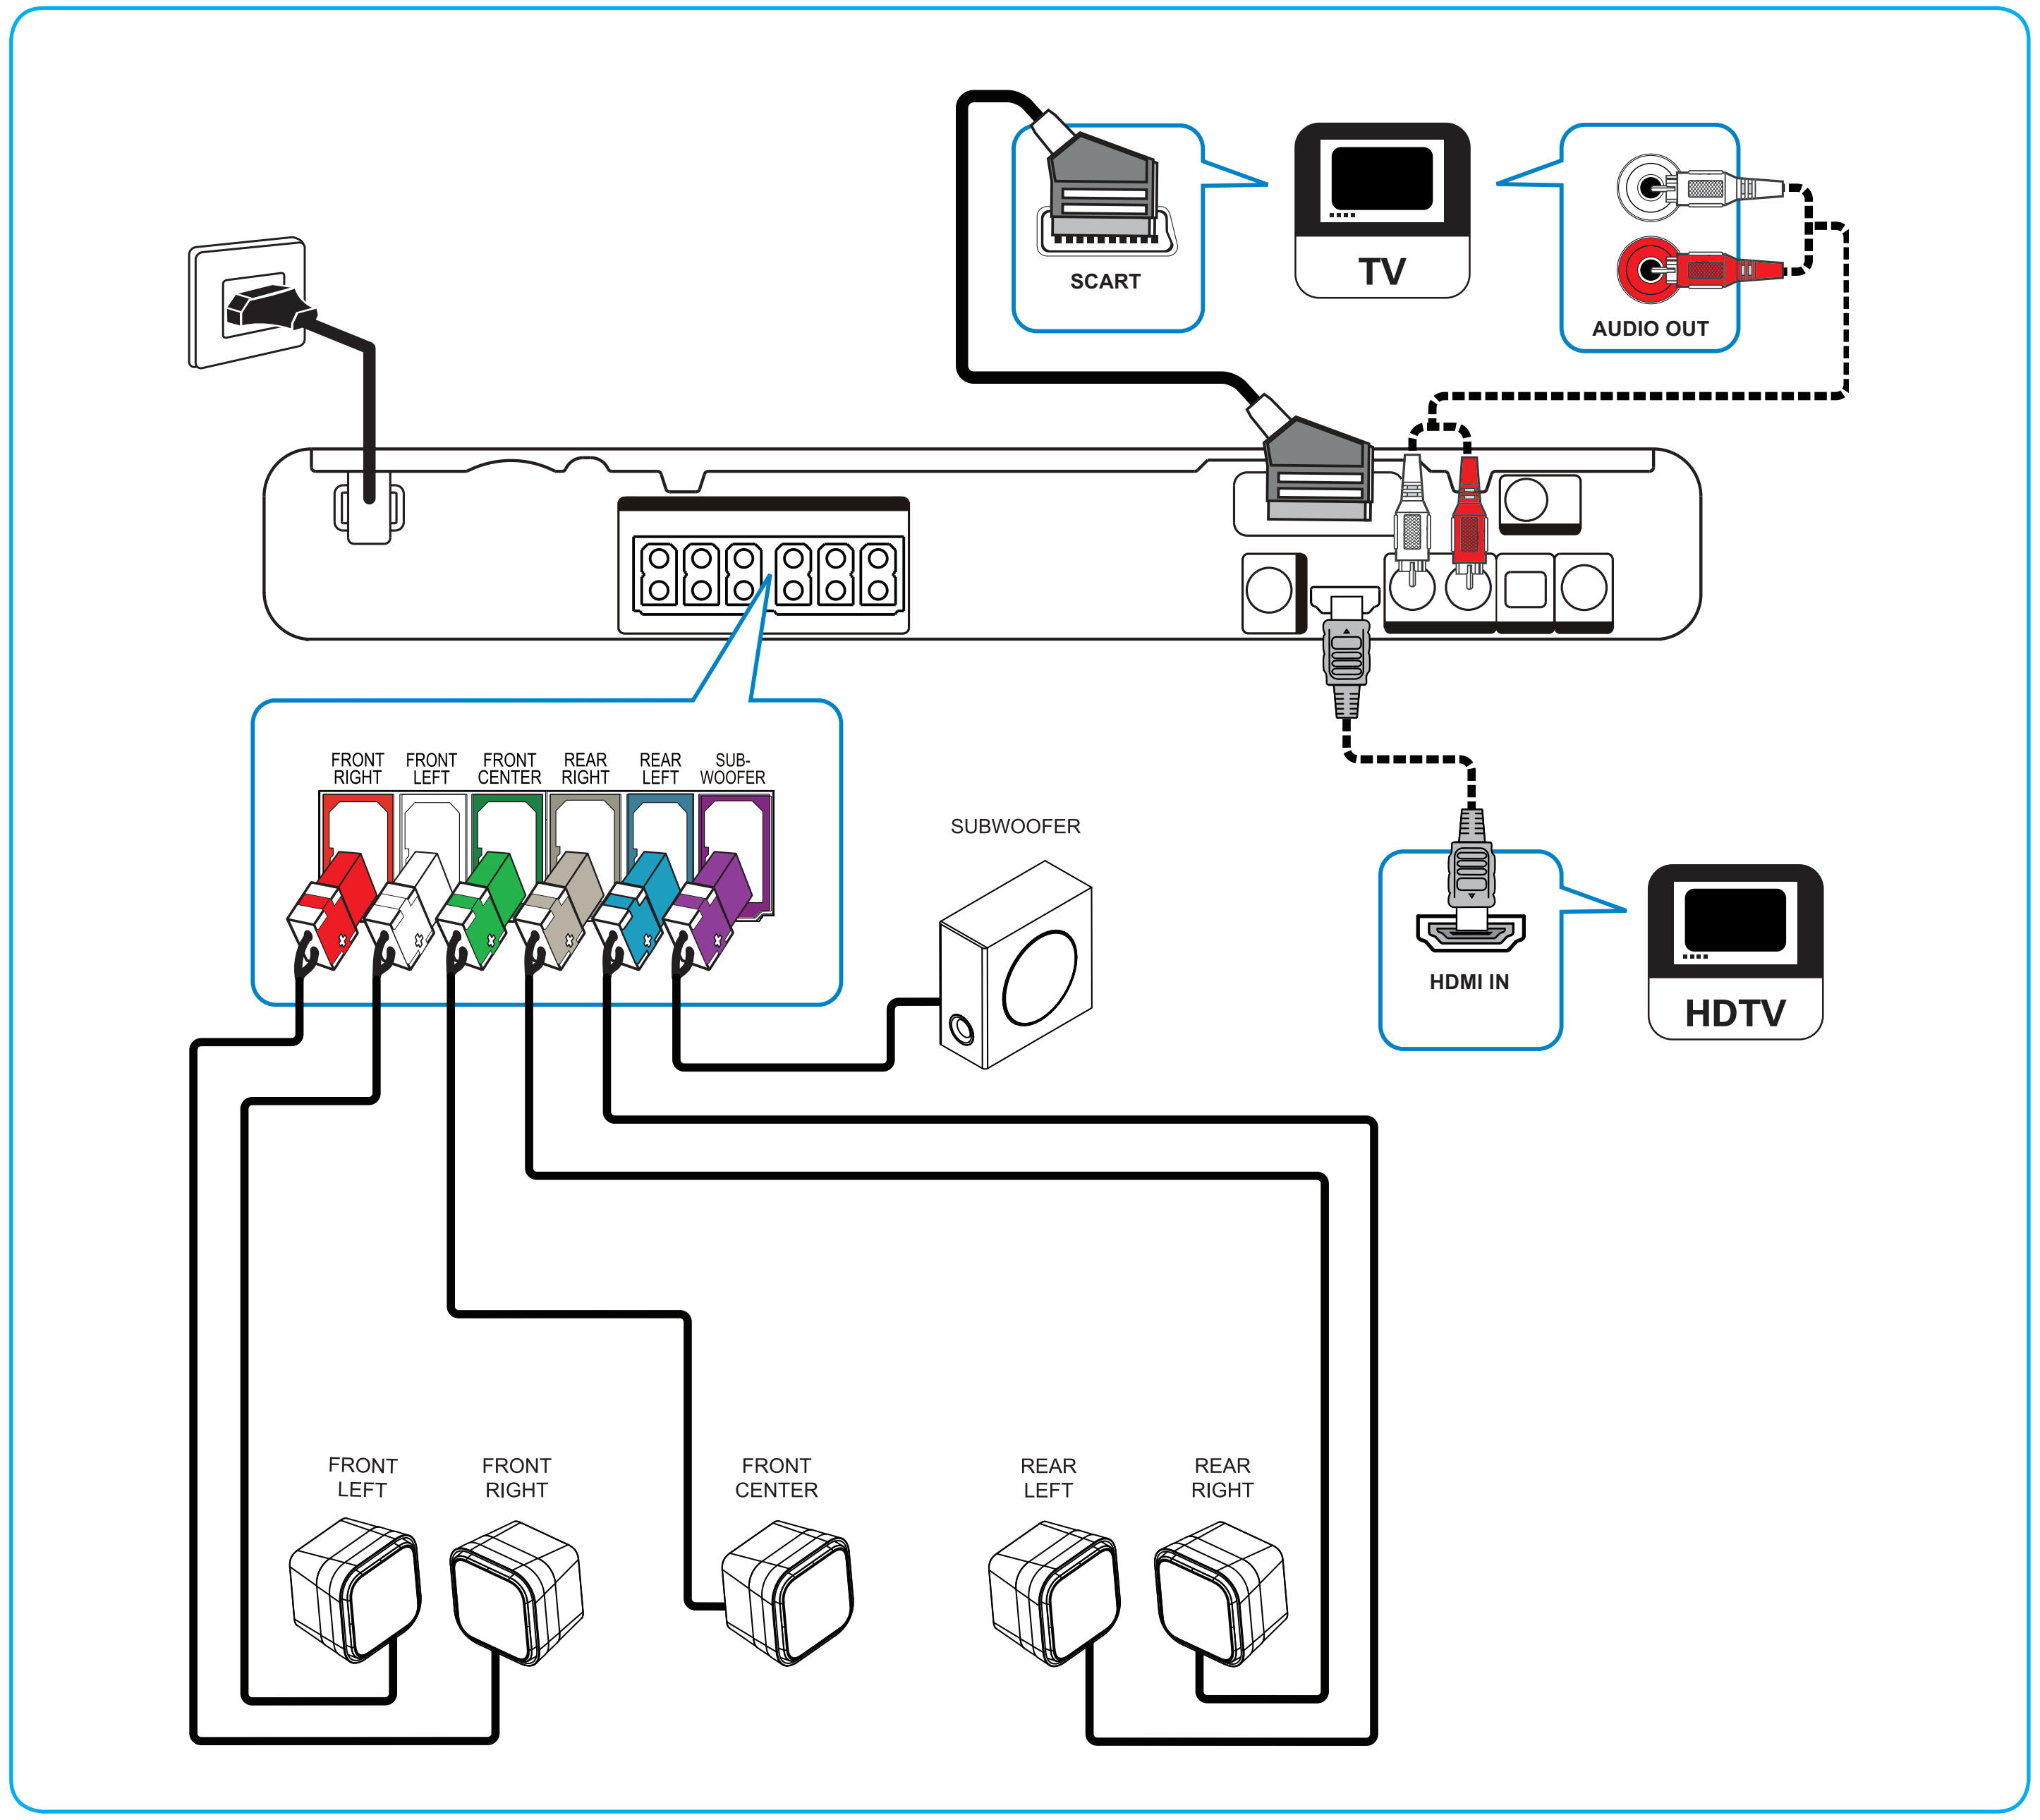
SCART
TV
AUDIO OUT
FRONT RIGHT
FRONT LEFT
FRONT CENTER
REAR RIGHT
REAR LEFT
SUB-WOOFER
SUBWOOFER
HDMI IN
HDTV
FRONT LEFT
FRONT RIGHT
FRONT CENTER
REAR LEFT
REAR RIGHT

# 2

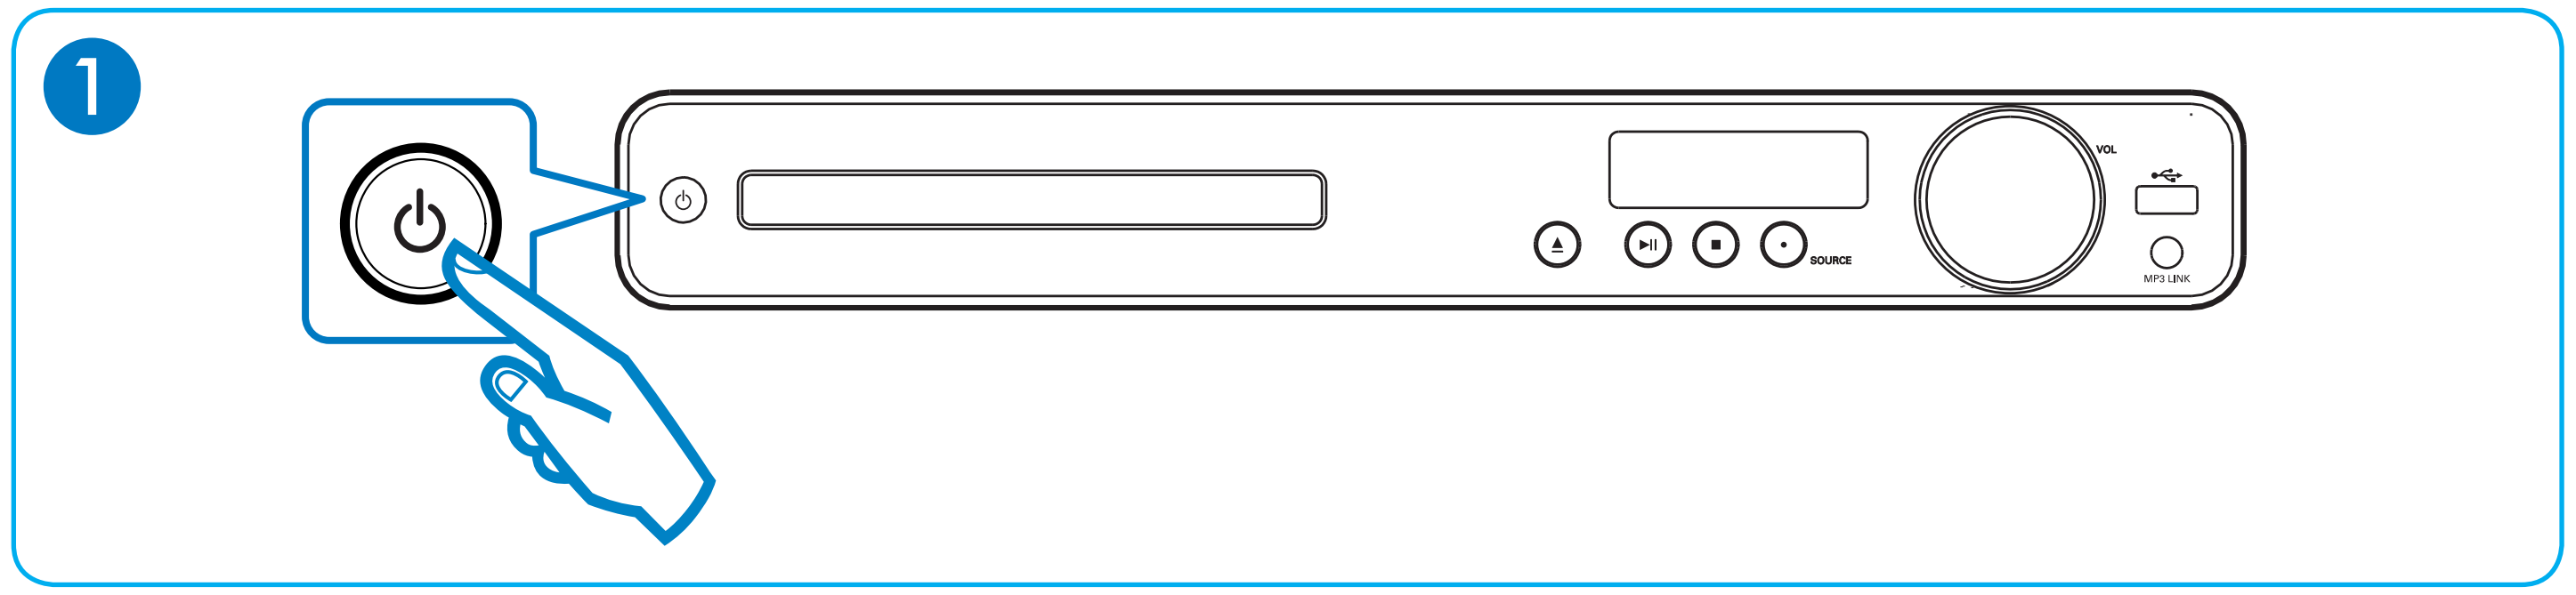
1
SOURCE

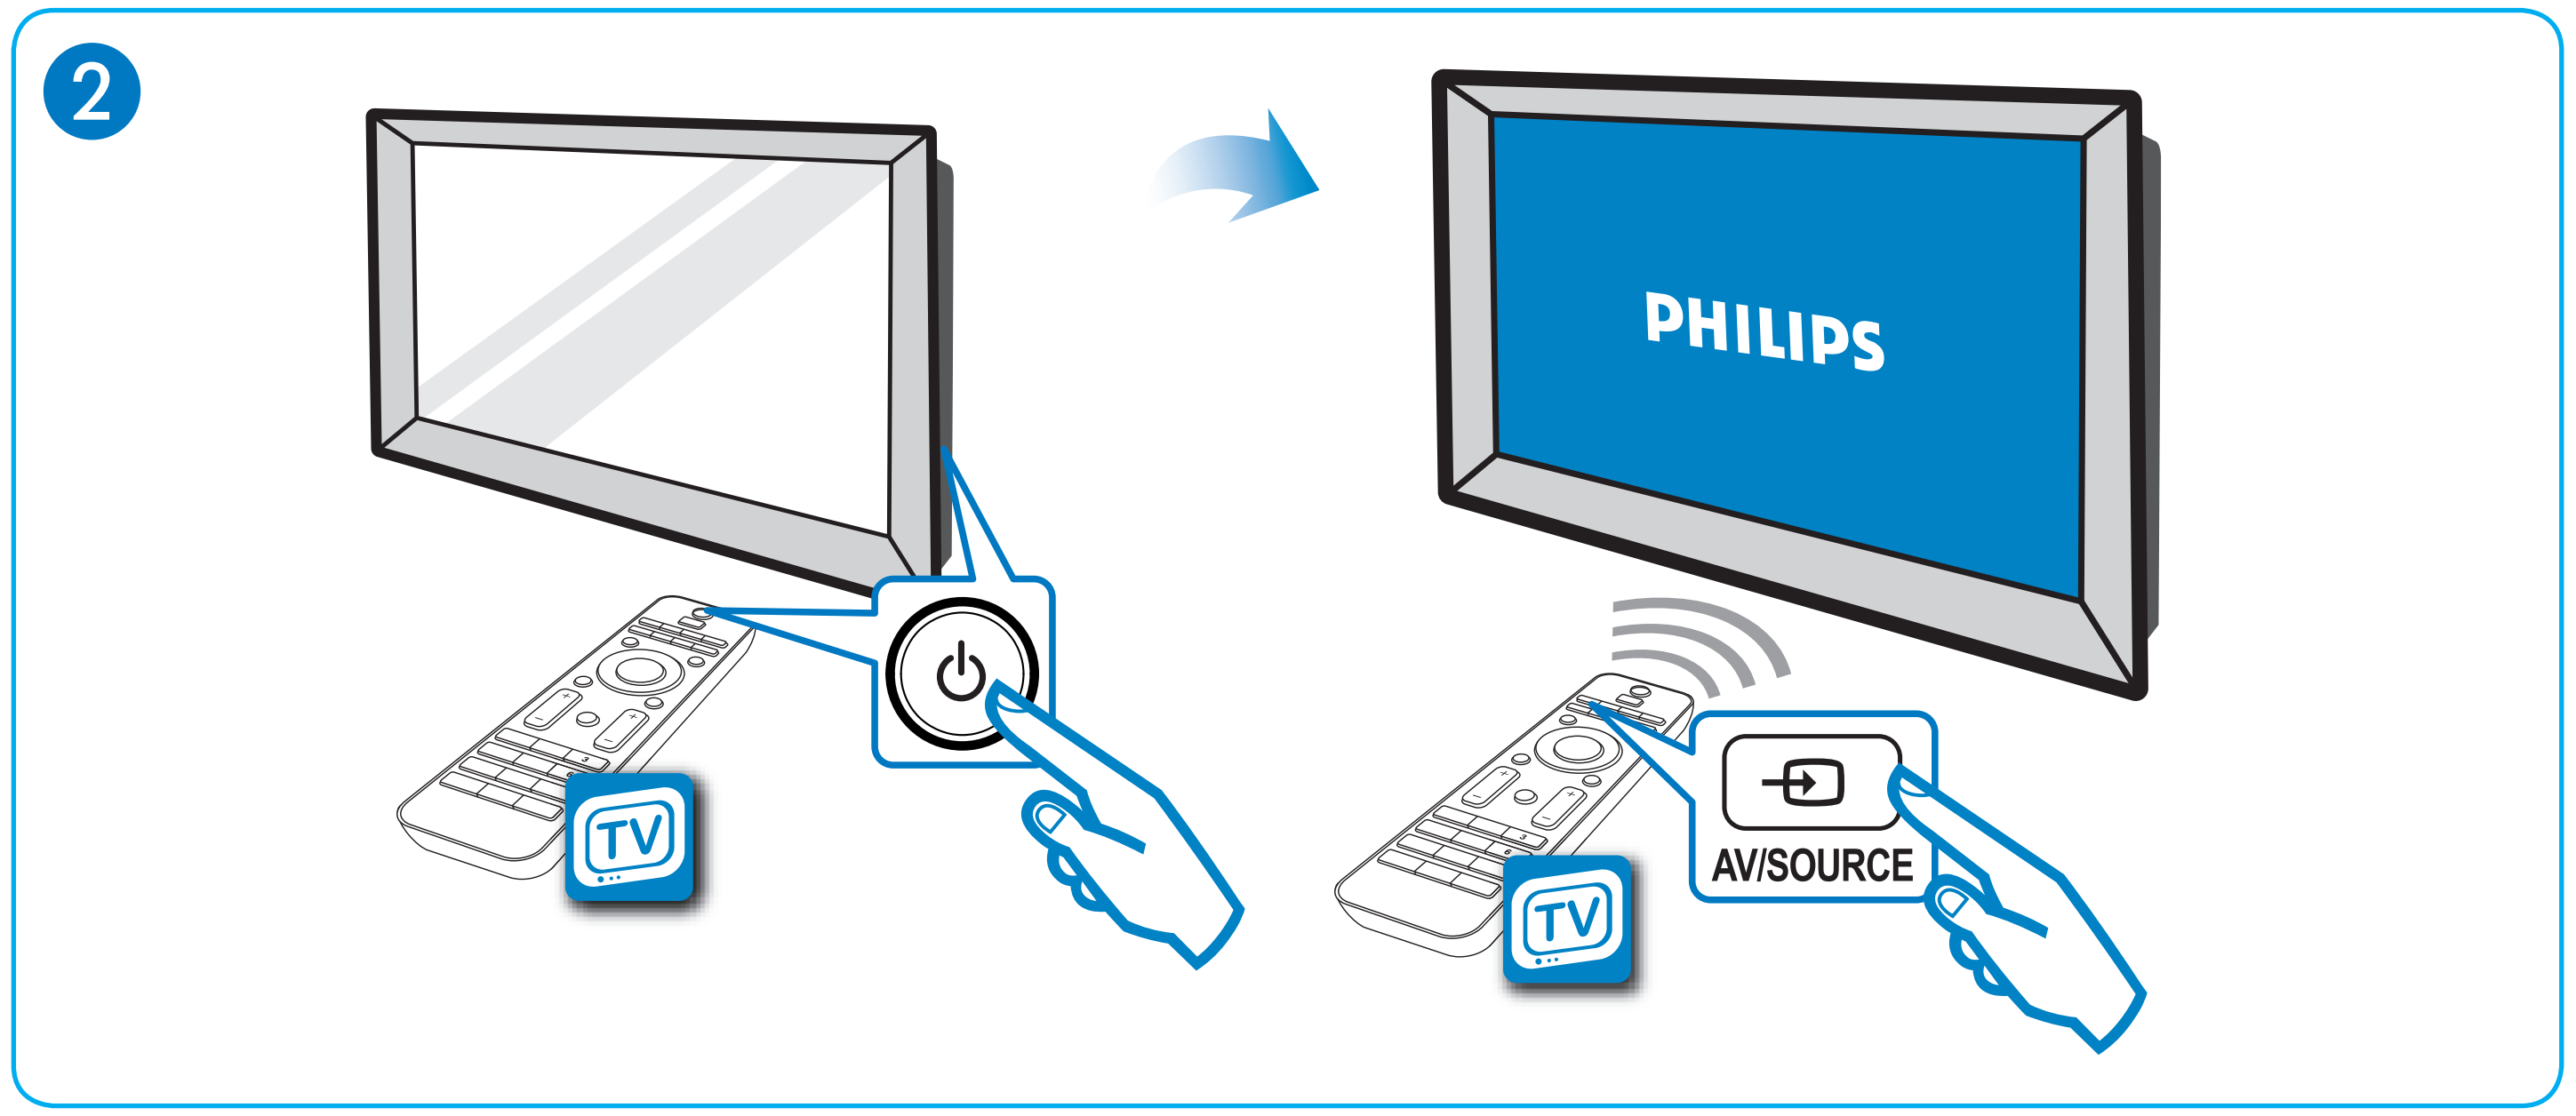
2
PHILIPS
TV
AV/SOURCE

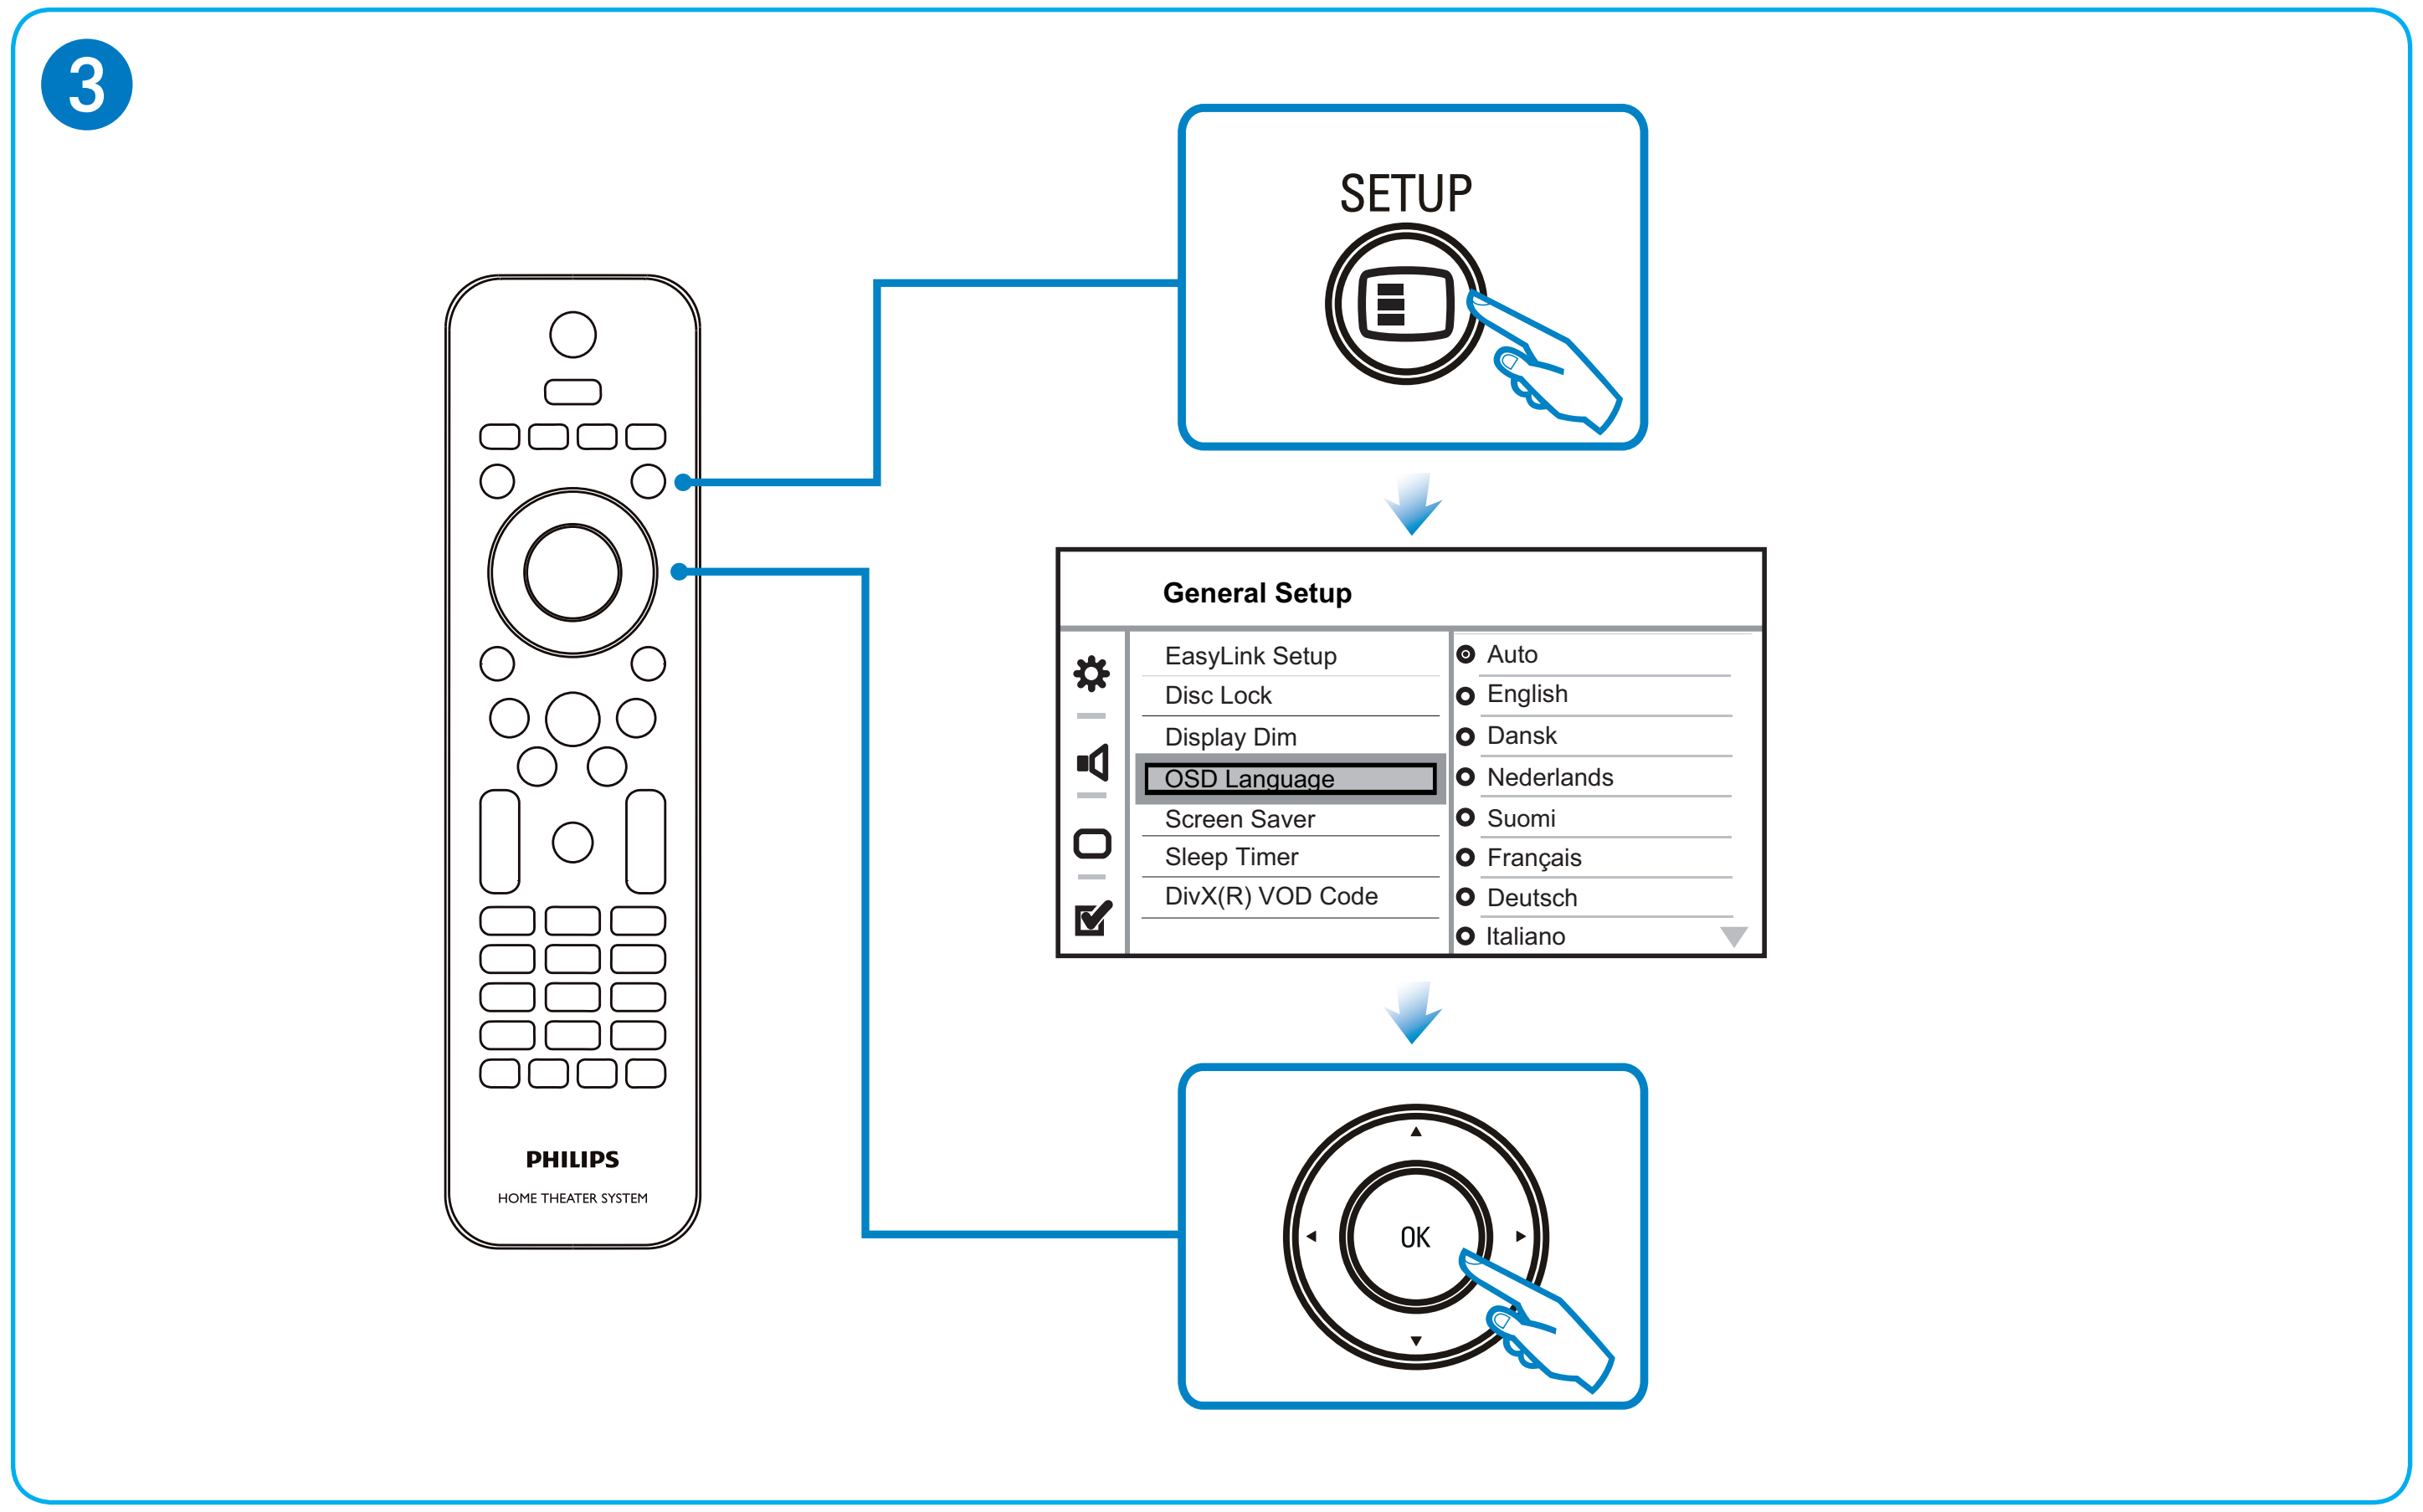
3
SETUP
General Setup
EasyLink Setup
Disc Lock
Display Dim
OSD Language
Screen Saver
Sleep Timer
DivX(R) VOD Code
Auto
English
Dansk
Nederlands
Suomi
Français
Deutsch
Italiano
OK
PHILIPS
HOME THEATER SYSTEM